



Quick Start Guide

DWC-VA583WTIR









	WHA	AT'S IN	N THE BOX		
DC plug		1	Template sheet	•	1
Hegaxonal Wrench (HEX2.0)		1	Quick setup guide		1
Screw and plastic anchor-2pcs	ii 44	1 set			

NOTE: Download all your support materials and tools in one place

- 1. Go to: http://www.digital-watchdog.com/resources
- 2. Search your product by entering the part number in the 'Search by Product' search bar. Results for applicable part numbers will populate automatically based on the part number you enter.
- 3. Click 'Search'. All supported materials, including manuals and quick start guide (QSGs) will appear in the results.



Attention: This document is intended to serve as a quick reference for initial setup. It is recommended that the user read the entire instruction manual for complete and proper installation and usage.

Tel: +1 (866) 446-3595 / (813) 888-9555

digital-watchdog.com


Technical Support Hours: 9:00AM - 8:00PM EST, Monday through Friday



Quick Start Guide

STEP 1 - PREPARING TO MOUNT THE CAMERA

- 1. The mounting surface must withstand five times the camera weight.
- 2. Do not let the cables get caught in improper places or the electric line cover can be damaged. This may cause a short or fire.
- 3. Use the mounting template to mark and drill the necessary holes in the mounting surface.
- 4. This product is intended to be supplied by a UL Listed Power Supply Unit marked "Class 2" or "LPS" or "PS2" and rated 12 Vdc, 0.64A min. or 24 Vac, 50/60Hz 0.46A min.

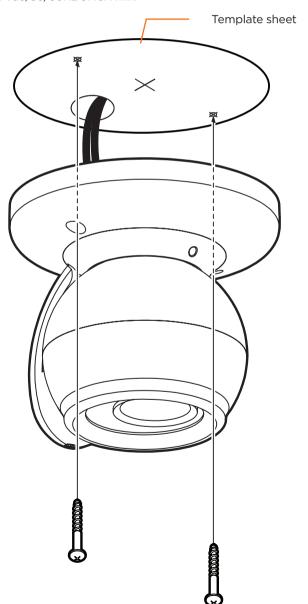

STEP 2 - CABLING THE CAMERA TO **EXTERNAL DEVICES**

Pass the wires through the mount bracket and make all necessary connections. Connect the BNC cable and power cables to the

Power Requirements	Power Consumption
DC12V / AC24V dual-voltage	DC12V (LED off): 4.36W, 363mA DC12V (LED on): 7.6W, 638mA AC24V (LED off): 4.5W, 278mA AC24V (LED on): 6.27W, 456mA



STEP 3 - CHANGING THE SIGNAL IN THE CAMERA

- 1. The camera supports HD-Analog, HD-CVI and HD-TVI signals. To switch between the signals:
 - a. Enter the camera's OSD menu from a recorder supporting UTC communication. Go to SETUP > OUTPUT > ANALOG MODE.
 - b. Set the camera's analog signal output from the following options:
 - HD-A: supports 5MP/1944p @ 20fps 4MP/1440p
 - @ 30fps, 2.1MP/1080p @ 30fps and 720p @ 30fps.
 - HD-T: supports 5MP/1944p @ 20fps, 4MP/1440p @ 30fps, 2.1MP/1080p @ 30fps and 720p @ 30fps.
 - HD-C: supports 4MP/1440p @ 30fps, 2.1MP/1080p @ 30fps and 720p @ 30fps.
 - CVBS: supports up to 960H @ 30fps
 - c. Change CONFIRM to ON to save the changes.
 - d. Go to the EXIT menu and select SAVE&EXIT to save all changes. The camera signal automatically.

OUTPUT

NOTE: To use your Star-Light Plus™ 5MP cameras at a lower resolution, you must use a VMAX® A1 Plus™ DVR to access the camera's menu due to the cameras being set to 5MP as the default. A DVR that does not support 5MP resolution may recognize the camera, but will not deliver a picture

STEP 4 - INSTALLING THE CAMERA


- 1. Once all cables have been connected, use the screws included with the camera to properly mount and secure the camera to the mounting surface.
- 2. Adjust the camera's pan, tilt and position to achieve the desired view. To adjust the camera's angle, loosen the pan/tilt/rotation screw at the base of the camera. The cameras' max angles are:

Pan: 0° ~ 360°

Tilt: 0° ~ 90°

Rotation: 0° ~ 360°

- 3. The DWC-VA583WTIR camera includes a vari-focal p-iris lens with motorized zoom and auto-focus. The zoom and focus can be controlled using the up the coax (UTC) communications. Simply connect the camera to a UTC enabled DVR and adjust the camera's zoom and focus remotely from the DVR.
- 4. Once the installation is complete, tighten the pan/tilt/rotation screw until it's secure.

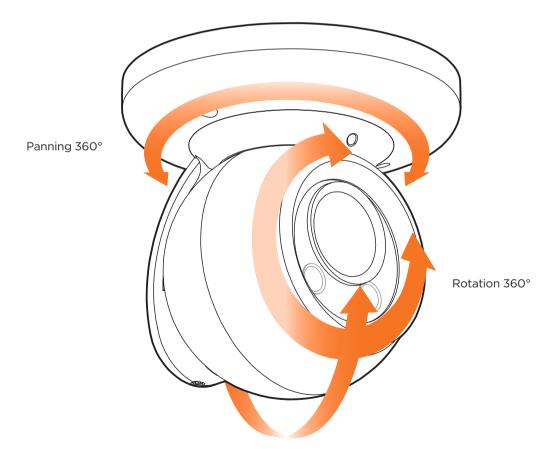

Titling 90°