



WHITE LIGHT AND IR LED ILLUMINATORS

STEP 1 - INSTALLATION

DW-ILWLIPM	DW-ILIRIP940	DW-ILHYBIP940
	DW-ILIRIP850	DW-ILHYBIP850



WHAT'S IN THE BOX

1x Illuminator
1x Waterproof cap
1x Mounting bracket
2x M6 screw and washer sets for the mounting bracket
1x Hex key
1x Front cover opener
1x Diffuser pack (30°, 60°, 95°) * 20° and 80° diffusers are available upon request.
1x Telemetry cable (optional)
1x Quick setup guide

NOTE: Download all your support materials and tools in one place.

1. Go to: <http://www.digital-watchdog.com/resources>.
2. Search for your product by entering the part number in the 'Search by Product' search bar. Results for applicable part numbers will populate automatically based on the part number you enter.
3. Click 'Search'. All supported materials, including manuals and quick start guide (QSGs) will appear in the results.



Attention: This document is intended to serve as a quick reference for the initial setup. It is recommended that the user read the entire instruction manual for complete and proper installation and usage.

NOTE:

- Only to be installed out of arms reach.
- Installation should be done by skilled personnel or under supervision of such personnel.
- The illuminator is PoE+.
- Only to be installed in restricted access areas.
- Terminal block not included. Installation may require advice from a qualified person.

Optimum results are achieved by setting up at night and viewing the results on a monitor.

1. Attach the illuminator mount to wall or camera housing using appropriate hardware.
2. Select a diffuser with an appropriate angle based on your installation needs. To position the required diffuser sheet, using the supplied pry tool, insert it into the slot located on the bottom of the lens. Gently lift the cover upwards slowly. Repeat at the opposite end and carefully remove the cover. Remove the backing sheet from the two adhesive discs and secure the required diffuser in position. Finally, firmly clip the lens cover back into place.



3. Adjust the angle of the illuminator to match the camera's field of view.
4. Adjust the vertical alignment by loosening the side bolts (one on each side of the main body) to maximize the results.
5. Tilt the lamp downwards until the desired field of view is illuminated.

STEP 2 - CABLING THE ILLUMINATOR

Connect to PoE+ switch or PoE+ injector for power and network connection.

Power requirements	Power consumption
PoE+ (IEEE802.3at)	26W

NOTE: Illuminator will flash once every second when insufficient power is applied.


Illuminators are powered by Power over the Ethernet (PoE+) via a network cable connector to a PoE IEEE802at compliant switch. The power consumption of the illuminators complies with PoE+ IEEE802at.

These illuminators are not supplied with a power cord. Instead, they are supplied with a 3.28ft (1m) long network cable. At the end of the network cable is a female RJ45 Cat5e compliant jack with the cable cover.

To use the illuminator's waterproof wiring:

- a. Install the LAN cable into **a**.
- b. **b** will be assembled to **a** with a 1/4 turn.
- c. Thread **c** tightly to **b**.

NOTE: To ensure moisture seal, make sure the o-ring is in place between **a** and **b**. In extreme environments use of an outdoor rated sealer is recommended.

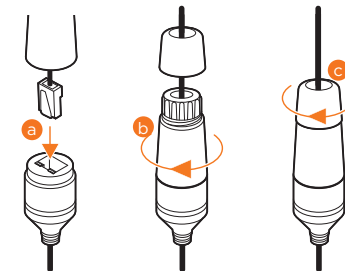

NOTE: When using the waterproof cap, crimp the RJ45 connector after passing the cable through the waterproof cap.


NOTE: Ensure that the cable cover is correctly connected and attached to the network cable. If this is not correctly connected, moisture can get into the connector and may cause the unit to malfunction. Incorrect installation would void the warranty on the product.

STEP 3 - WEB INTERFACE

Login

1. Open a web browser.
2. In the address field, type in the selected unit IP address (see following).
3. The user interface login page is shown.
4. Create your username and password. When connecting to the for the first time, a password must be set.

NOTE: Default IP address: 192.168.1.10

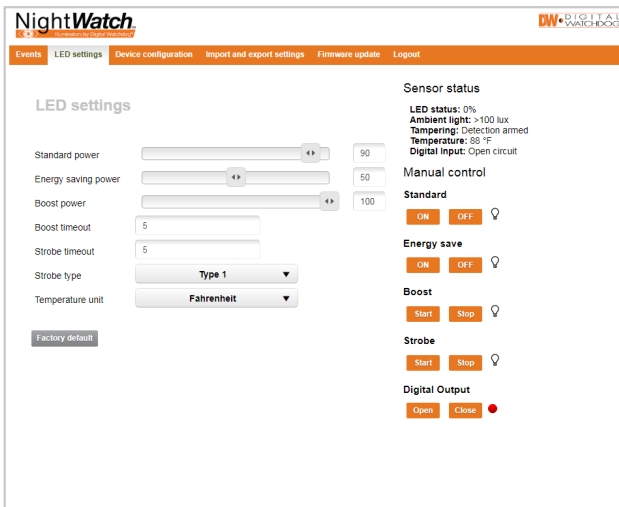


* Options may vary based on the model.

STEP 4 - RESETTING THE ILLUMINATOR

Follow the diagram below to locate the reset button on the side of the illuminator. Unscrew and open the cap and press the reset button according to the following options:

- 1-2 seconds press: power cycle. The LED will flash once the button is released.
- 3 seconds press: reset the network and user credential. The LED will flash 3 times after 3 seconds.
- 10 seconds press: reset to factory setting (erase all). The LED will flash 3 times after 3 seconds, then will turn on again when the button is released after 10 seconds.

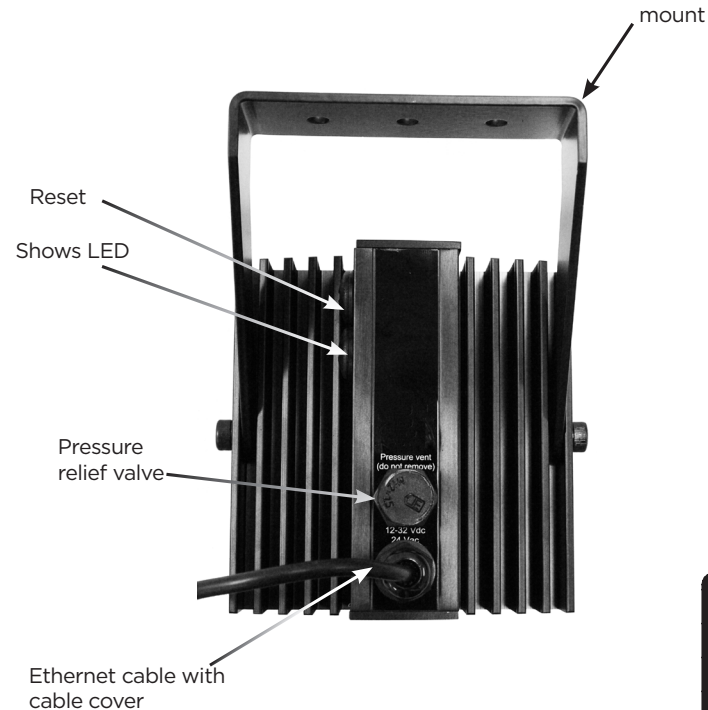

Safety Warning

- When the lamp is running, it is hot to touch. Before touching switch off the illuminator and allow to cool for a minimum of 10 minutes.
- The illuminator should be positioned so that prolonged staring into the illuminator at a distance closed than 1m is not expected.
- The light source of this illuminator is not replaceable, when the light source reaches its end of life the whole illuminator should be replaced.
- If the flexible power cord of the illuminator is damaged it should be exclusively replaced by an authorized service agent.
- This equipment is not suitable for use in locations where children are likely to be present.

RISK
GROUP 2
CAUTION
IR emitted
from this
product

